Copyright by GRUNER AP @2024_V1. Subject to change in technology and Design.



Technical data sheet

227C-230-08E **Rotary Actuator**

Description

Rotary actuator for adjusting dampers in HVAC installations.

Running time 20 s / 90° Torque 8 Nm Nominal voltage 230 VAC/DC Control continuous control (0)2...10 VDC Damper size up to approx. 1.6 m² Damper coupling

♦ 8-15 mm / Ø 8-20 mm



Technical data

Electrical data

| Nominal voltage | 230 VAC/DC, 50/60Hz |
|--|---|
| Nominal voltage range | 85265 VAC/DC |
| Power consumption motor (motion) | 5.0 W |
| Power consumption standby (end position) | 1.5 W |
| Wire sizing | 8.0 VA |
| Control | continuous control (0)210 VDC |
| Connection motor | cable L= 2 x 1000 mm, 4 x 0. 75 mm² & 2 x 0.75 mm² (halogen free) |
| Connection feedback potentiometer | - |
| Connection GUAC | - |
| Feedback signal | 0)210 VDC, max. 5 mA |

1



| Functional data | | |
|-----------------|--|--|
| | Torque | 8 Nm |
| | Damper size | up to approx. 1.6 m² |
| | Synchronized speed | +/-5% |
| | Direction of rotation | selected by switch |
| | Manual override | gearing latch disengaged with pushbutton, self-resetting |
| | Angle of rotation | 0°max. 95° can be limited with adjustable mechanical end stops |
| | Running Time | 20 s / 90° |
| | Sound power level | < 45 dB(A) |
| | Shaft coupling | clamp \$ 8-15 mm / Ø 8-20 mm |
| | Position indication | mechanical with pointer |
| | Service life | 100,000 cycles (0°95°0°) > 1,500,000 partial cycles (max. ±5°) |
| Safety | | |
| | Protection class | II (double insulation) |
| | Degree of protection | IP 54 (cable downwards) |
| | EMC | CE (2014/30/EU) |
| | LVD | CE (2014/35/EU) |
| | RoHS | CE (2011/65/EU - 2015/863/EU - 2017/2102/EU) |
| | Mode of operation | Typ 1 (EN 60730-1) |
| | Rated impulse voltage supply / control | 4 kV (EN 60730-1) |
| | | |
| | Control pollution degree | 3 (EN 60730-1) |
| | Control pollution degree Ambient temperature normal operation | 3 (EN 60730-1) -30°C+50°C |
| | Ambient temperature normal | , |

| Dimensions/Weight | t |
|-------------------|---|
|-------------------|---|

| Dimensions | 117 x 67 x 61 mm |
|------------|------------------|
| Weight | 350 g |

Ambient humidity

Maintenance

5...95% r.H., non-condensing (EN 60730-1)

Maintenance free



Functionality / Properties

Operating mode

Connect power supply to wire 1+2 and a reference signal Y to wire 3 in range of (0)2...10 VDC, actuator drives to its specified position. The actual damper position (0...100%) is a feedback signal U on wire 4 for example to share with other actuators.

The actuator is overload-proof, requires no limit switches and automatically stops, when the end stop is reached.

Direct mounting

Simple direct mounting on the damper shaft with a clamp, protection against rotating with enclosed anti-rotation lock or rather at intended attachment points.

Manual override

Manual override with self resetting push button possible (the gear is disengaged as long as the button is pressed).

Mode switch

Mode switch with five positions at the housing:

2-10 R: rotary direction right 2-10 VDC

0-10 R: rotary direction right 0-10 VDC


Adp: adaption

0-10 L: rotary direction left 0-10 VDC


2-10 R: rotary direction left 2-10


Adaption drive

- · Actuator power off
- Setting the mechanical end stops
- · Actuator power on
- Adaption enable
- Actuator drive to position 0
- Actuator drive to position 1
- Adaption disable, if desired angular range reached or rather if actuator reached endstop
- "Y" refers to the measured angular range

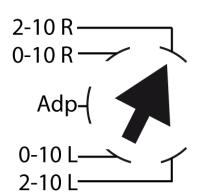

Connector / Security Note

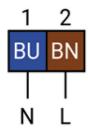

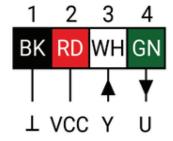

Safety remarks

- Connect via safety isolation transformer.
- The device is not allowed to beused outside the specified field of application, especially inairplanes.
- It may only be installed by suitably trained personnel. Any legal regulations or regulations issued by authorities must be observed during assembly.
- The device may only be opened at the manufacturer's site.
- The device is not allowed to be disposed of as household refuse. All locally valid regulations and requirements mustbe observed.
- When calculating the required torque, the specifications supplied by the damper manufacturer's (cross section, design, installation site), and the air flow conditions must be observed.



Technical Drawing

