

## 227C-230-08J Rotary Actuator

### Description

Rotary actuator for adjusting dampers in HVAC installations.

- Running time 120 s / 90°
- Torque 8 Nm
- Nominal voltage 230 VAC/DC
- Control continuous control (0)2...10 VDC
- Damper size up to approx. 1.6 m<sup>2</sup>
- Damper coupling clamp  
∅ 8-15 mm / Ø 8-20 mm



### Technical data

#### Electrical data

<b>Nominal voltage</b>	230 VAC/DC, 50/60Hz
<b>Nominal voltage range</b>	85...265 VAC/DC
<b>Power consumption motor (motion)</b>	3.0 W
<b>Power consumption standby (end position)</b>	1.0 W
<b>Wire sizing</b>	8.5 VA
<b>Control</b>	continuous control (0)2...10 VDC
<b>Connection motor</b>	cable L= 2 x 1000 mm, 4 x 0.75 mm <sup>2</sup> & 2 x 0.75 mm <sup>2</sup> (halogen free)
<b>Connection feedback potentiometer</b>	-
<b>Connection GUAC</b>	-
<b>Feedback signal</b>	0)2...10 VDC, max. 5 mA

### Functional data

<b>Torque</b>	8 Nm
<b>Damper size</b>	up to approx. 1.6 m <sup>2</sup>
<b>Synchronized speed</b>	+/-5%
<b>Direction of rotation</b>	selected by switch
<b>Manual override</b>	gearing latch disengaged with pushbutton, self-resetting
<b>Angle of rotation</b>	0°...max. 95° can be limited with adjustable mechanical end stops
<b>Running Time</b>	120 s / 90°
<b>Sound power level</b>	< 35 dB(A)
<b>Shaft coupling</b>	clamp $\diamond$ 8-15 mm / $\varnothing$ 8-20 mm
<b>Position indication</b>	mechanical with pointer
<b>Service life</b>	100,000 cycles (0°...95°...0°) > 1,500,000 partial cycles (max. $\pm$ 5°)

### Safety

<b>Protection class</b>	II (double insulation)
<b>Degree of protection</b>	IP 54 (cable downwards)
<b>EMC</b>	CE (2014/30/EU)
<b>LVD</b>	CE (2014/35/EU)
<b>RoHS</b>	CE (2011/65/EU - 2015/863/EU - 2017/2102/EU)
<b>Mode of operation</b>	Typ 1 (EN 60730-1)
<b>Rated impulse voltage supply / control</b>	4 kV (EN 60730-1)
<b>Control pollution degree</b>	3 (EN 60730-1)
<b>Ambient temperature normal operation</b>	-30°C...+50°C
<b>Storage temperature</b>	-30°C...+80°C
<b>Ambient humidity</b>	5...95% r.H., non-condensing (EN 60730-1)
<b>Maintenance</b>	Maintenance free

### Dimensions/Weight

<b>Dimensions</b>	117 x 67 x 61 mm
<b>Weight</b>	350 g

## Functionality / Properties

### Operating mode

Connect power supply to wire 1+2 and a reference signal Y to wire 3 in range of (0)2...10 VDC, actuator drives to its specified position. The actual damper position (0...100%) is a feedback signal U on wire 4 for example to share with other actuators. The actuator is overload-proof, requires no limit switches and automatically stops, when the end stop is reached.

### Direct mounting

Simple direct mounting on the damper shaft with a clamp, protection against rotating with enclosed anti-rotation lock or rather at intended attachment points.

### Manual override


Manual override with self resetting push button possible (the gear is disengaged as long as the button is pressed).

### Mode switch


Mode switch with five positions at the housing:  
 2-10 R: rotary direction right 2-10 VDC  
 0-10 R: rotary direction right 0-10 VDC  
 Adp: adaption  
 0-10 L: rotary direction left 0-10 VDC  
 2-10 L: rotary direction left 2-10 VDC

### Adaption drive

- Actuator power off
- Setting the mechanical end stops
- Actuator power on
- Adaption enable
- Actuator drive to position 0
- Actuator drive to position 1
- Adaption disable, if desired angular range reached or rather if actuator reached endstop
- "Y" refers to the measured angular range

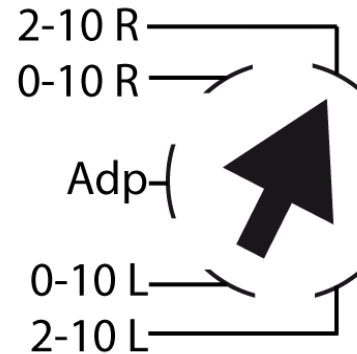


## Connector / Security Note

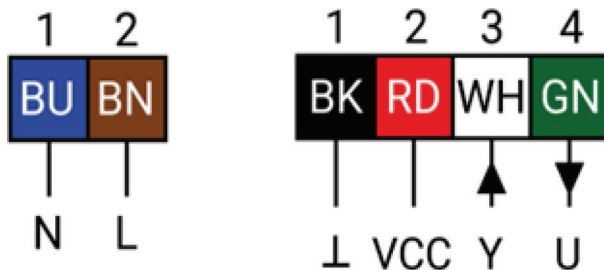

### Safety remarks

- Connect via safety isolation transformer.
- The device is not allowed to be used outside the specified field of application, especially in airplanes.
- It may only be installed by suitably trained personnel. Any legal regulations or regulations issued by authorities must be observed during assembly.
- The device may only be opened at the manufacturer's site.
- The device is not allowed to be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- When calculating the required torque, the specifications supplied by the damper manufacturer's (cross section, design, installation site), and the air flow conditions must be observed.

Technical Drawing

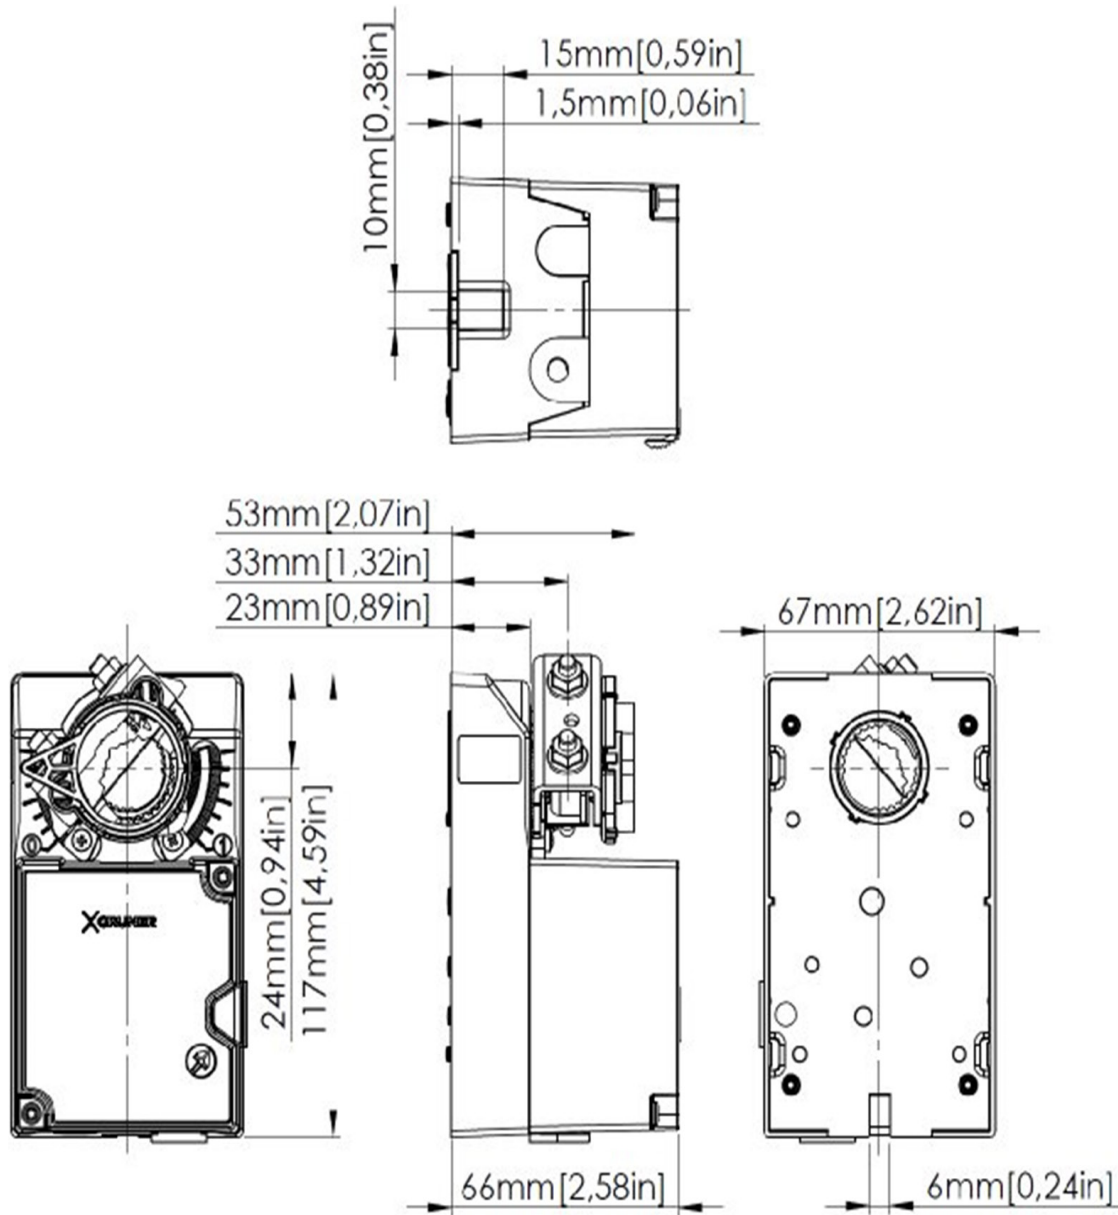

Copyright by GRUNER AP @2024\_V1. Subject to change in technology and Design.