Copyright by GRUNER AP @2024_V1. Subject to change in technology and Design.



Technical data sheet

363-024-30 Rotary Actuator

Description

Rotary actuator for adjusting dampers in HVAC installations.

Running time
Torque
Nominal voltage
Control
Damper size
Damper coupling
Running time
24V AC/DC
2-/3-point
up to approx. 6 m²
clamp
9-18 mm / Ø 9-26 mm



Technical data

Electrical data

24V AC/DC, 50/60Hz 1929 VAC/DC	
1929 VAC/DC	nge 1
	.90
4.5 W	n motor (motion)
1.5 W	n standby
6.0 VA	6
2-/3-point	2
-	-
-	-
-	-
-	-
cable 1000 mm, 3 x 0.7 (halogen free)	
.7	4.5 W 6.0 VA 2-/3-point

Connection feedback potentiometer

1

Connection auxiliary switch

Connection GUAC



Functional data		
	Torque	30 Nm
	Damper size	up to approx. 6 m²
	Synchronized speed	±5%
	Direction of rotation	selected by switch
	Manual override	gearing latch disengaged with pushbutton, self-resetting
	Angle of rotation	0°max. 95° can be limited with adjustable mechanical end stops
	Running Time	150 s / 90°
	Sound power level	< 45 dB(A)
	Shaft coupling	clamp ◊ 9-18 mm / Ø 9-26 mm
	Position indication	mechanical with pointer
	Service life	> 60'000 cycles (0° - 95° - 0°)

Safety	
--------	--

Protection class	III (double insulation)
Degree of protection	IP 54
EMC	CE (2014/30/EU)
LVD	CE (2014/35/EU)
RoHS	CE (2011/65/EU - 2015/863/EU - 2017/2102/EU)
Mode of operation	Typ 1 (EN 60730-1)
Rated impulse voltage supply / control	0.8 kV (EN 60730-1)
Control pollution degree	3 (EN 60730-1)
Ambient temperature normal operation	-30°C+50°C
Storage temperature	-30°C+80°C
Ambient humidity	595% r.H., non-condensing (EN 60730-1)
Maintenance	Maintenance free

Dimensions/Weight

Dimensions	193 x 96 x 60 mm
Weight	1600 g

Functionality / Properties

Operating mode

2 point:

Connect power supply to wire 1+2, actuator drives to position 1. Is also wire 3 connected to the power supply, actuator drives to position 0.

3 point:

Connect power supply to wire 1+2, actuator drives to position 1. Is wire 1+3 connected to the power supply, actuator drives to position 0.

The actuator is overload-proof, requires no limit switches and automatically stops, when the end stop is reached.

Direct mounting


Simple direct mounting on the damper shaft with a clamp, protection against rotating with enclosed anti-rotation lock or rather at intended attachment points

Manual override


Manual override with selfresetting pushbutton possible (the gear is disengaged as long as the button is pressed).

Mode switch

DIP switch under the case cover R / CW: rotary direction right / clockwise L / CWW: rotary direction left / counter clockwise

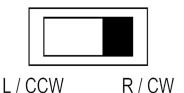

Connector / Security Note

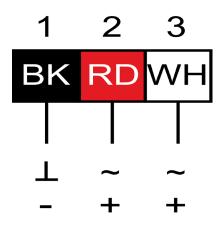


Safety remarks

- Connect via safety isolation transformer!
- The device is not allowed to be used outside the specified field of application, especially in airplanes.
- It may only be installed by suitably trained personnel. Any legal regulations or regulations issued by authorities must be observed during assembly.
- The device may only be opened at the manufacturer's site.
- Cables must not be removed from the device.
- The cable of this actuator cannot be replaced. If the cableis damaged, the actuator should be scrapped.
- The device is not allowed to be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- When calculating the required torque, the specifications supplied by the damper manufacturer's (cross section, design, installation site), and the air flow conditions must be observed.



Technical Drawing

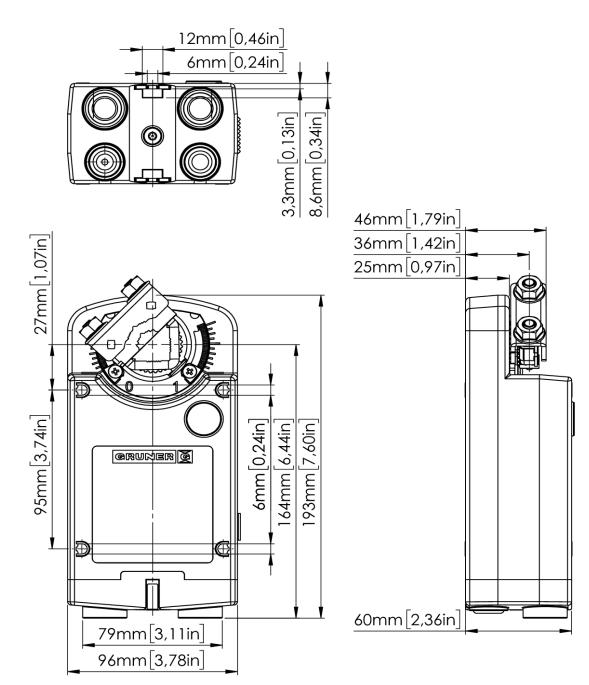

Copyright by GRUNER AP @2024_V1. Subject to change in technology and Design.